


Installing Bundle Breaker Rule in 5/8" wood.
(shown at .080" penetration)

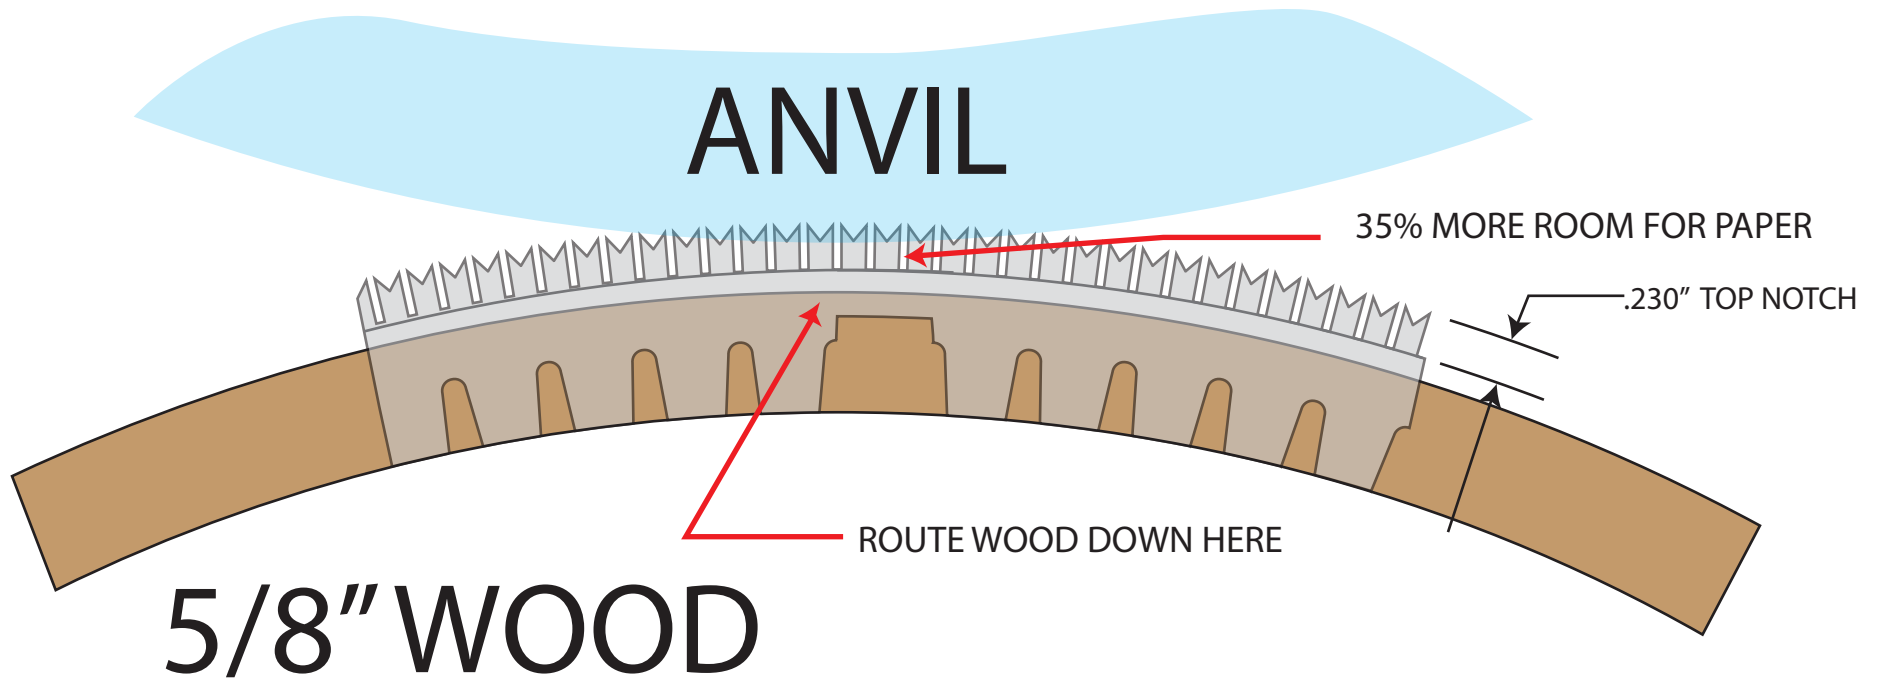

For 5/8" wood, bridge notch steel rule at 1/2" and route wood down 1/8" over bridge to accept rule